



axtrom[™]
DIGITAL FRAME
XT-DF7A

- Photo Rotate, Zoom, Preview
- Support SD/MS/MMC Card
- Support USB 2.0 Interface
- 7" LCD High Resolution Screen
- Power Consumption: 10W at most
- Power Supply: Dc 12V
- File Format Supportable: JPEG

USER'S MANUAL

www.axtrom.com

Digital Photo Frame

User's Manual

Table of Contents

Main Features	4
Precautions & Maintenance	5
Cleaning The LCD Screen	5
Inserting Memory Cards	6
Getting Started	6
Remote Controls	7
Installing And Replacing Battery	8
Viewing Pictures	9
TV Connection	10
USB Host Function	10
Setup Menu	11
Specifications	12
Certification	13
Environmental Operating Ranges	13

Introduction

Congratulations on your purchase of this Digital Picture Frame.

Before operating the unit, please read this manual thoroughly, and retain it for future reference. This manual will help you use many of the exciting and useful features that will make your Digital Picture Frame viewing more enjoyable.

This Digital Picture Frame lets you view digital pictures directly from your camera's memory cards. You will be able to create a slideshow using multiple transition effects or display one picture at a time. No computer, digital camera or Internet connection is required.

This Digital Picture Frame is compatible with the following popular flash memory card formats: SD™, Multimedia Card™, Memory Stick™, Compact Flash Card™ (Optional).

Chapter 1

Main features

1. Displays digital pictures (JPEG) without a computer.
2. Simply insert a compatible flash memory card into the Digital Picture Frame to show photos.
3. Compatible flash memory cards include Secure Digital Card (SD), MultiMedia Card (MMC),
4. Memory Stick (MS) and Compact Flash Card (CF) (Optional).
5. Compatible with most digital camera's stored JPEG images file format.
6. Includes a remote control.
7. Bright 7 inch TFT active matrix LCD screen. Automatic slideshow with multiple transition effects. User-friendly on-screen display lets you access all controls easily.

Chapter 2

Precautions & maintenance

The Digital Picture Frame is for indoor use only.

To reduce the risk of fire or electric shock does not expose this appliance to rain or moisture.

Do not block the ventilation holes on the back of the Digital Picture Frame at any time.

Keep your Digital Picture Frame out of sunlight. Direct sunlight may cause damage.

Do not open the case of the Digital Picture Frame. There is a risk of electric shock, and there are no user serviceable parts inside. Opening the case will void your warranty.

Cleaning the LCD screen

Treat the screen gently. The screen on the Digital Picture Frame is made of glass and can be scratched or broken.

If fingerprints or dust make the LCD screen dirty, we recommend using a soft, non-abrasive cloth such as the camera lens cloth to clean the LCD screen.

If you use the LCD cleaning kit sold on the market, do not apply the cleaning liquid directly to the LCD screen. Clean the LCD screen with cleaning cloth moistened with the liquid.

Chapter 3

Inserting memory cards

The Digital Picture Frame is compatible with the following memory cards:

- Secure Digital™ Card (Sd)
- MultiMedia™ Card (MMC)
- Memory Stick™ Card (MS)
- Compact Flash™ Card (CF) (Optional)

Insert the memory card with the front label facing toward the back of the frame. Do not force the memory card into the memory slot. If you are not able to easily insert the memory card completely, you may have inserted it in the wrong way.

If the card is inserted correctly, the screen will display the content of the memory card.

Getting started

1. Insert the DC 12V plug to the DC jack on the underside of the Digital Picture Frame.
2. Switch the Digital Picture Frame's Power Switch(on the backside) to the "ON" side.

Remote control

When first using the remote control, please remove the plastic battery insulator (if any) on the bottom of the remote control and make sure the remote control has a battery installed. See "Installing and replacing battery" section if you need a new battery.

Power	Not available
TV Mode	Not available
AV_	Not available
Mute	Not available
Photo	Not available
Music	Not available
Movie	Not available
File	Enter file select/mode
Display	Display the picture property
Rotate	Rotate the current picture
Slide show	Enter slideshow mode
Slide interval	Change the slide interval
Setup	Enter / Exit the setup menu
Zoom	Zoom in Zoom out
Card	Select current available card
Audio	Not available
Skip	Not available
Skip forward	Not available

Volume up	Not available
Volume	Not available
Up	Up
Down	Down
Left	Left
Right	Right
Enter	Select current highlight item
Previous	Select previous item
Next	Select next item
Mode	Switch the 16:9 mode and 4:3
Play	Play
Pause	Pause
Stop	Stop
Repeat	Select the repeat choice

Installing and replacing battery

1. Place the remote control with the control buttons facing downward.
2. While pressing down on the ridged area of the battery cover pull the tray out.
3. Place a "CR2025" lithium battery on the tray with the positive "+" end facing toward you.
4. Close the tray.

Viewing Pictures

1. You can use either the remote control or the on-board buttons to control the Picture Frame. Please refer to the previous section "Remote Control" for details.
2. Remove the plastic battery insulator(if any) on the bottom of the remote control and make sure the remote control has a battery installed. See "Installing and replacing battery" section if you need a new battery.
3. Use the remote control to enter the file select mode(Use the file button FILE on the remote control).
4. Use the remote control to highlight and select the Photo folder (Use the direction buttons RIGHT, LEFT, UP, DOWN on the remote control to navigate and press OK to select).
5. Highlight a picture and press OK button to view the picture. Press direction RIGHT, LEFT, UP, DOWN button to have photo rotation effect.
6. Press REPEAT button for repeat mode. Then the frame will repeat photos automatically. To view a single picture, select the "REPEAT ONE" mode.
7. You can change the view mode from "16:9" mode to 4:3" mode with press the MODE key on the Digital Picture Frame.

TV connection

Use the supplied Audio/Video out cable to connect the Digital Picture Frame to a TV Turn off both the frame and the TV before you make the connection.

Connect the yellow RCA connector to the video input on your TV.

USB host function

You can use the supplied usb cable to connect your USB device such as U disk or MP3/MP4 player ,etc. And then, you can view the content on the USB device automatically.

Chapter 4

Setup Menu

Press the Setup button on the remote control to enter the Setup menu. This menu include following submenu:

1. OSD language: You can select English / French / Spanish / Simp Chinese now.
2. Aspect ratio: You can select 4:3 mode or 16:9 mode.
3. Vew mode: You can select Fill / Original / Auto Fit or Pan Scan mode.
4. TV system: You can select NTSC or PAL mode.
5. Smart picture: You can select Standard / Bright / Soft / Dynamic display mode.
6. JPEG interval: You can select 5 seconds / 10 seconds / 15 seconds.
7. Use default settings: You can recover the default settings.

Specifications

Display:

1. 7 inch TFT LCD

Accessory:

1. AC adapter: input 100-240V AC; output 12V, 1.2A DC
2. AV output cable
3. USB adapter cable
4. Remote Control
5. User manual

Certification

1. CE, FCC, ROHS

Environmental operating ranges

1. Operation: -5 - 40°C, Humidity 20 - 80%
2. Storage: -15 - 50°C, Humidity 10 - 90%

Product and brand names mentioned in this manual are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.



LCD DIGITAL PHOTO FRAME

www.axtrom.com